

Preset buttons (7):

You can preset four AM stations and four FM stations.

AM and FM stations are preset with the memory switch (8).

Press the memory switch and the memory indicator "CH" (9) will blink on the display.

Press one of the four preset buttons while the memory indicator "CH" is blinking.

The indicator will stop blinking and the preset channel will be visible on the display.

The memory indicator will go out 7 seconds after the memory switch was pressed, if the preset buttons are not depressed.

The memory is erased automatically if you tune and preset a new AM or FM station.

