
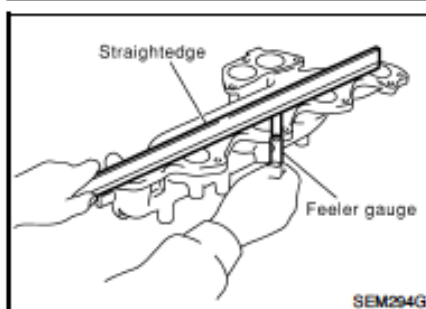


Removal and Installation (Cont'd)

REMOVAL

1. Remove the following parts.
 - Drain engine coolant. Refer to MA section, "Changing Engine Coolant".
 - Remove air hose (on throttle body side).
 - Remove injection tube.
 - Remove or relocate wires/harnesses and tubes/pipes.

2. Remove intake manifold in the reverse order of that shown in the figure.

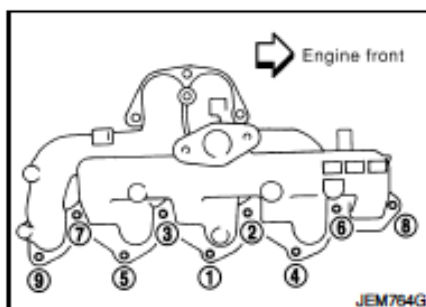

Inspection

Clean surface of intake manifold.
Use a reliable straightedge and feeler gauge to check the flatness of intake manifold surface.

Intake manifold surface flatness:
Limit 0.2 mm (0.008 in)

INSTALLATION

1. Tighten intake manifold in the numerical order shown in the figure.
2. Install in the reverse order of removal.

