


FRONT FINAL DRIVE ASSEMBLY

< SERVICE INFORMATION >

FRONT FINAL DRIVE ASSEMBLY

Removal and Installation

INFOID:000000005444678

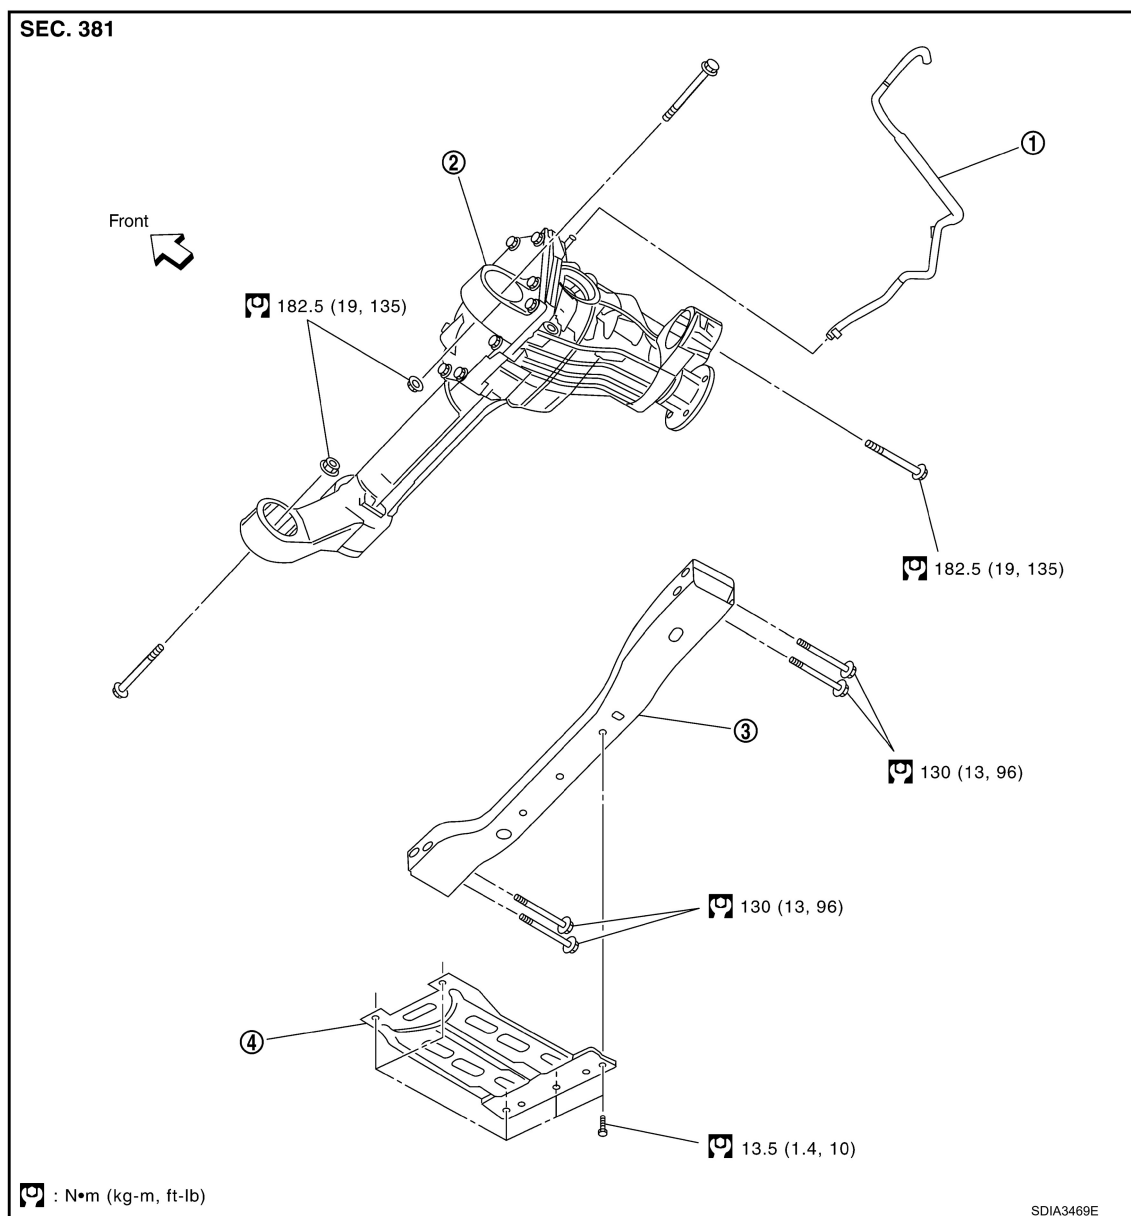

- | | | |
|----------------------------|-------------------------------|----------------------|
| 1. Breather hose | 2. Front final drive assembly | 3. Front crossmember |
| 4. Engine under cover rear | | |

REMOVAL

1. Remove the front wheels and tires using power tool.
2. Without disassembling the hydraulic lines, remove the caliper torque member bolts using power tool. Then reposition the brake caliper aside using suitable wire. Refer to [BR-21, "Removal and Installation of Brake Caliper Assembly"](#).

CAUTION:

Do not press the brake pedal while brake caliper is removed.

3. Remove the ABS sensor harness from the mount on the knuckle.

CAUTION:

Do not pull on the ABS sensor harness.