


Nissan Navara D40 Denso Diesel ECU

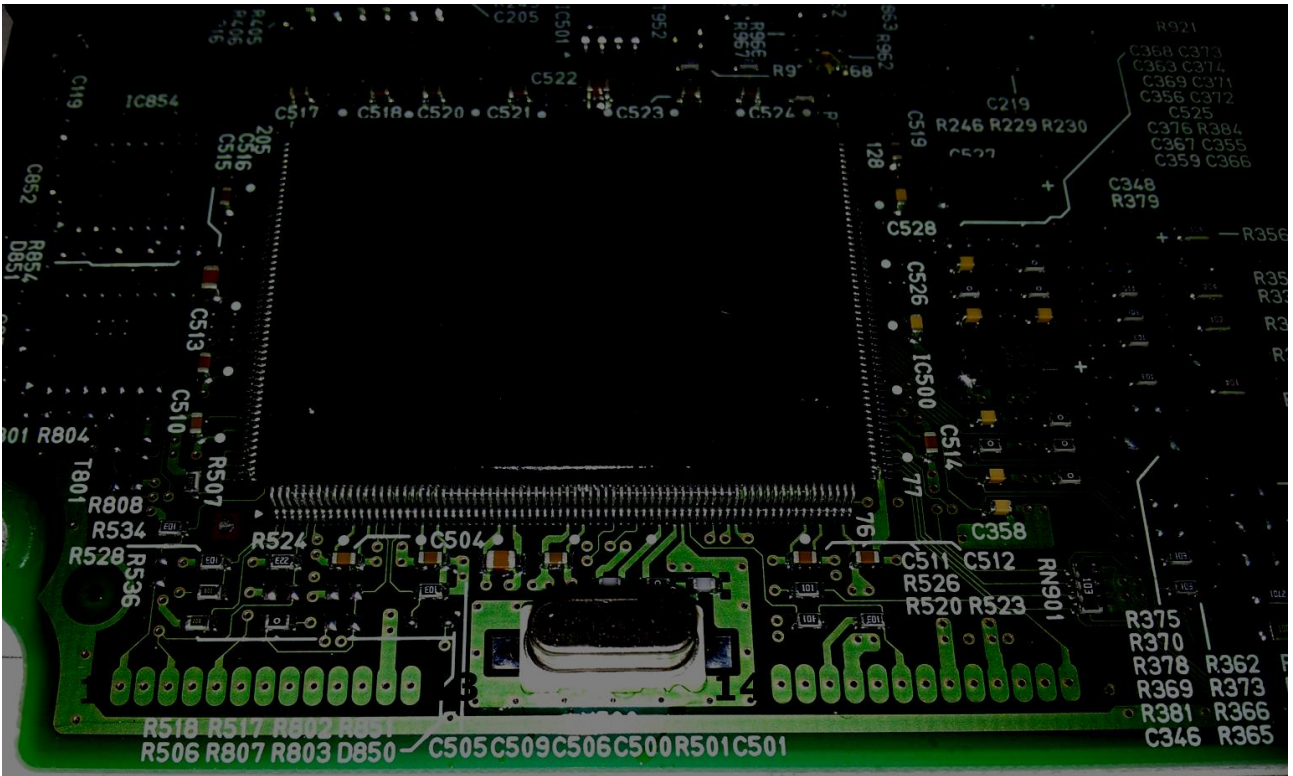

Pad #	Function	CPU Pin	Pad #	Function	CPU Pin
1	PL0	216	14	PB12	159
2	AUDRST	238	15	+5V	
3	PD12	5	16	+3,25V	Vcc
4	AUDMD	240	17	GND	Vss
5	PB12	159	18	(GND??)	??
6	AUDATA0	241	19	MD1	55
7	AUDATA1	242	20	Reset	58
8	AUDATA2	243	21	+5V	PVcc2
9	AUDATA3	244	22	TX	
10	AUDSYNC	246	23	GND	Vss
11	AUDCLK	245	24	RX	
12	GND	Vss	25	Watchdog (SCK)	125Hz
13	+5V	PVcc2	26	FWE	56

Watchdog timer (bootmode): Pin 25, toggle TTL voltage at 125Hz.

Enter bootmode: FWE +5V, MD1 GND, at startup.

Reset: Pin 20, toggle GND.