



ECU	Color	Function	ECU	Color	Function
1	B	ECU Ground	62		
2	B	ECU Ground	63	R	Fuel Rail Pressure +
3	B	ECU Ground	64	V	ensor Power (Refrigerant, Boos
4	V	Fuel Injector 1 & 4 +	65	B	CKP Sensor -
5	G	Fuel Injector 2 & 3 +	66	B	CMP Sensor -
6	BR	Turbo VNT Solenoid	67	shield	Sensor Shield Ground
7			66		
8			68	W	Fuel Rail Pressure -
9			69	B	Fuel Pump Temp Sensor -
10	G	Fuel Pump	70	LG	ECT Sensor
11			71	L	Boost Sensor (Map?) -
12			72		
13			73	B	MAF Sensor -
14			74	R	IAT Sensor
15	GR	Intake air Valve	75		
16			76		
17			77		
18			78		
19			79		
20			80		
21	G	Fuel Injector 2	81		
22	P	Fuel Injector 2	82	W	APP Sensor 1 +
23	W	Fuel Injector 3	83	R	APP Sensor 1
24	W	Fuel Injector 3	84	B	APP Sensor 1 -
25	Y	EGR 1	85	shield	Sensor Shield Ground APP
26	O	EGR 2	86		
27	GR	EGR 3	87	P	CAN Lo
28	V	EGR 4	88		
29	B	Fuel Pump	89	SB	K-Line
30			90	W	APP Sensor 2 +
31			91	R	APP Sensor 2
32			92	B	APP Sensor 2 -
33			93		
34			94		
35			95	L	CAN Hi
36			96		
37	G	Glow Plugs Relay	97		
38			98		
39			99	V	Start Switch
40	W	Fuel Injector 4	100	V	Brake Light Switch
41	GR	Fuel Injector 4	101	W	ASCD Brake Switch
42	W	Fuel Injector 1	102	SB	ASCD Steering Switch
43	B	Fuel Injector 1	103	B	ASCD Steering Switch -
44	W	CKP Sensor +	104		
45	W	CMP Sensor +	105	BR	ECU Relay
46	R	CKP Sensor	106		
47	R	CMP Sensor	107	R	Ignition Switch
48	L	Fuel Rail Pressure	108	R	Ignition Switch
49	B	Fuel Rail Pressure	109		
50	Y	Fuel Pump Temp Sensor	110	O(M), G(A)	Neutral Switch
51	SB	ECT Sensor	111		
52	BR	Boost Sensor (MAP?)	112		
53	W	Refrigerant Sensor	113	BR	ECU Relay
54	G	MAF Sensor +	114	B	ECU Ground
55	W	IAT Sensor	115		
56			116		
57			117		
58			118		
59			119	R	ECU Power
60			120	G	ECU Power
61			121	V	ECU Power (Backup)