



# Auxilliary Battery wiring diagram

Under bonnet

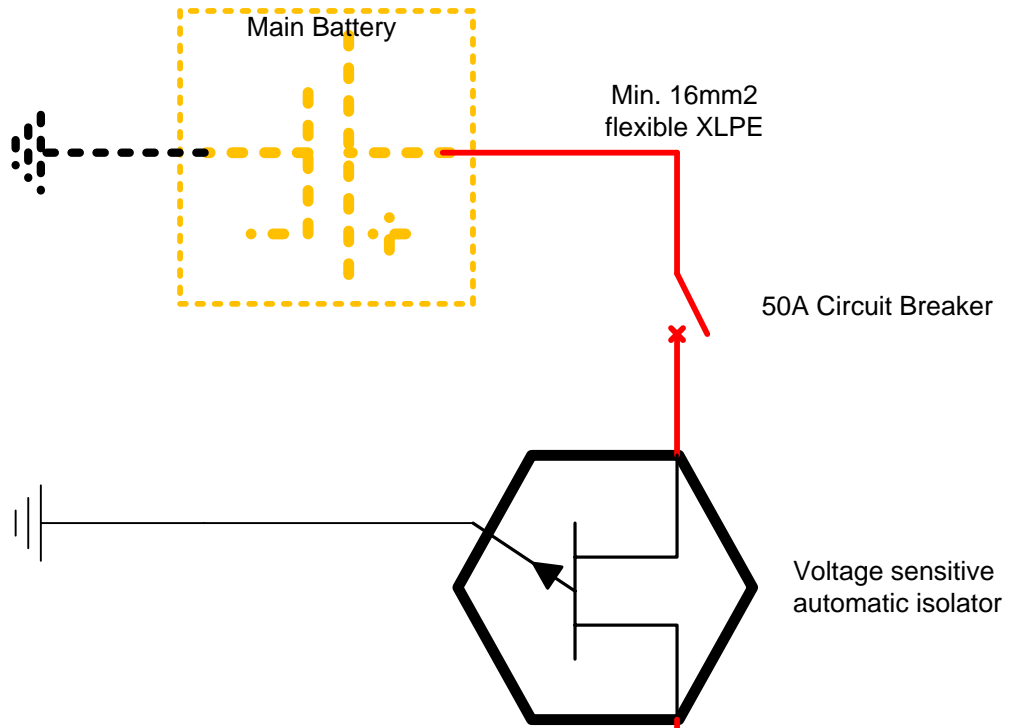

Rear of vehicle (sealed enclosure or inside canopy)

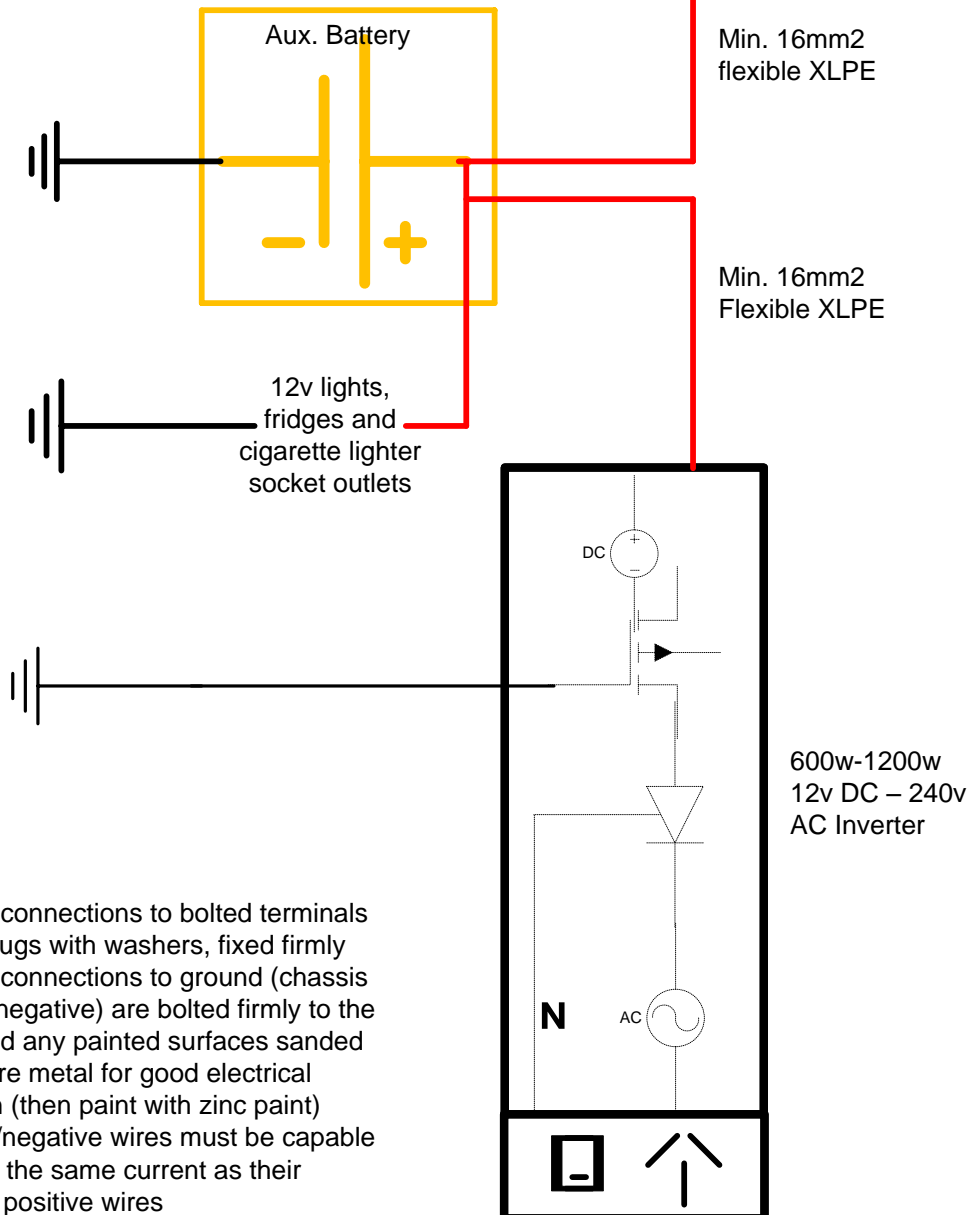

- Ensure all connections to bolted terminals are crimp lugs with washers, fixed firmly
- Ensure all connections to ground (chassis or battery negative) are bolted firmly to the chassis and any painted surfaces sanded back to bare metal for good electrical connection (then paint with zinc paint)
- All ground/negative wires must be capable of carrying the same current as their respective positive wires