

ODYSSEY

Stator Panel Replacement (Page 1 of 2)

Tools required (not included):

Square drive tool (#2)

Phillips screw driver

- 1 Turn off amp. Unplug speaker AC cord. Disconnect the speaker cables from the Ascent.
- 2 Along the back of the panel and on both sides, remove the four lowest screws from the inner row of screws (closest to the stat panel). Leave the top screw on each side in place (see figure 1).
- 3 Using a Phillips screw driver, remove the small black stator wire cover plate (see figure 2).
- 4 Gently lay the speaker on its back.
- 5 With the speaker angled up, remove both remaining top screw from the inner row of screws (see figure 3).
- 6 Lower the speaker the rest of the way to the floor (see figure 4).
- 7 Gently slide the panel upwards approximately one inch to reveal the stator wires (see figure 4).
- 8 Carefully lift and remove the panel from the speaker, noting that it is still attached by three wires (see figure 5).
- 9 With your hands gently disconnect the red, black and blue stator wires (see figure 6 & 7).
- 10 Installation is reverse of removal.

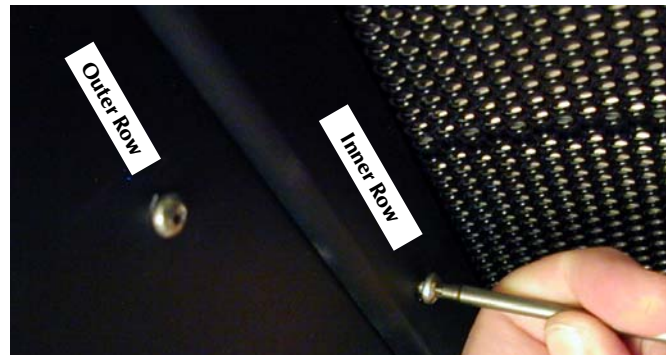


Figure 1



Figure 2



Figure 3

c / s e l e c t r o s t a t i c



MARTIN LOGAN

2101 Delaware Street, Lawrence, Kansas 66046, USA tel 785.749.0133 fax 785.749.5320 www.martinlogan.com

©2000 MartinLogan, All rights reserved

Rev. #021501

ODYSSEY

Stator Panel Replacement (Page 2 of 2)



Figure 4



Figure 5

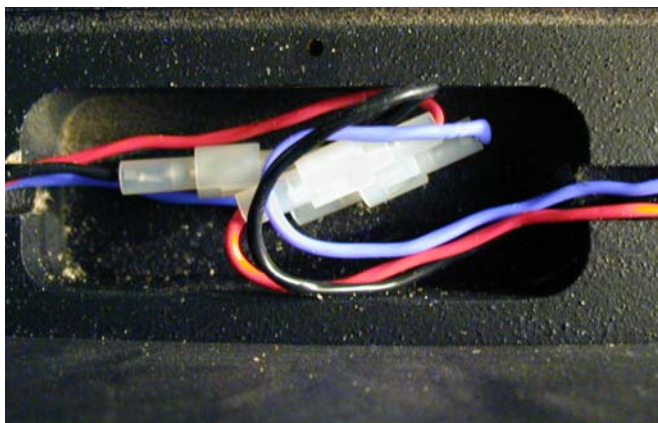


Figure 6

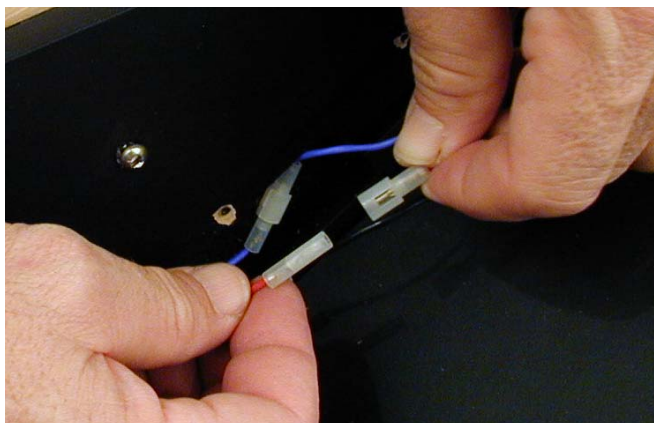


Figure 7

c / s e l e c t r o s t a t i c



MARTIN LOGAN

2101 Delaware Street, Lawrence, Kansas 66046, USA tel 785.749.0133 fax 785.749.5320 www.martinlogan.com

©2000 MartinLogan, All rights reserved

Rev. #021501